 
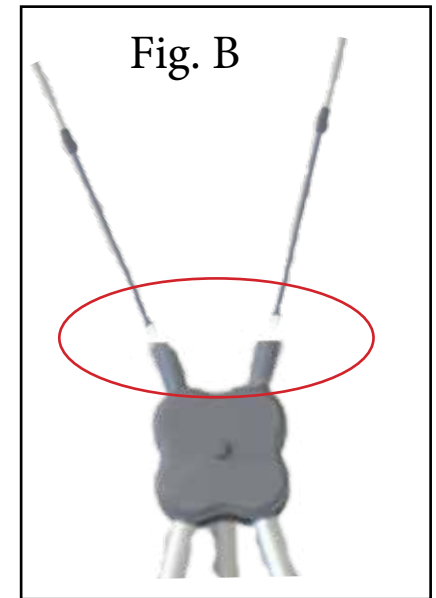 
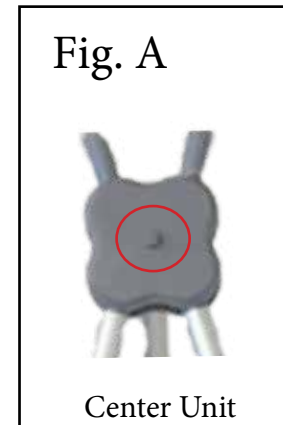 


Stand-Up Ballot Display Kit

Assembly Instructions

View Demonstration Video at
www.arifkin.com/solutions7.php
"Banner Stand, How to Assemble" Video

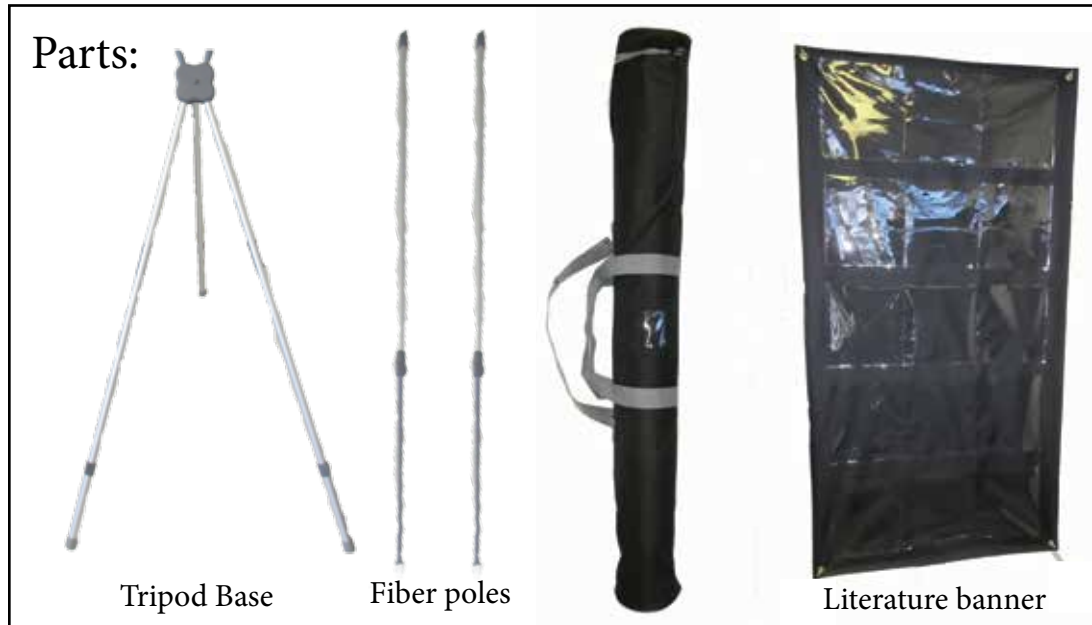

1. Pull all parts out of bag in the area where stand will be displayed.
2. Hold the tripod base upright with the legs facing down. Press the button in the center to release the front legs (see figure A). When the legs are pulled apart, button will pop out to lock them in place.
3. Pull the middle leg back to stabilize the legs. (Crank on the back side of the center unit can loosen and tighten this leg in place.)
4. Insert the fiber poles into the holes at the top of the tripod base (see Figure B). Spin the hooks to face the front.
5. Attach grommets on the banner to the top hooks. Then pull one of the bottom corners down to hook in place, and then repeat on the other side. You are now ready to insert your literature.

A. RIFKIN Co.
Established 1892

Customer Service: 800-458-7300
Visit our website at www.arifkin.com

Standard

CatIDs: AFBLT-100-8204 (15 Letter-Sized Pockets)

AFBLT-200-8204 (12 Legal-Sized Pockets)

AFBLT-300-8204 (1 Legal Row at top, 4 Letter Rows Underneath)

*For custom banner units, refer to your Order for catID or call customer service.